




CIBO ECO MIRRORED SHELF

WALL HUNG 750 / 900 / 1200 / 1500

750mm


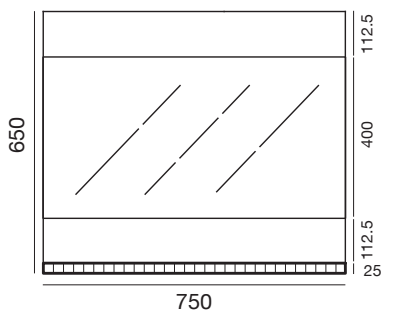


Side view

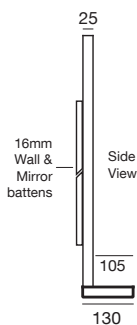



Eco 900 Mirrored Shelf.

900mm

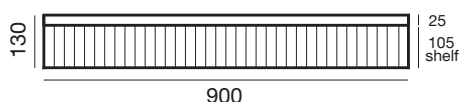
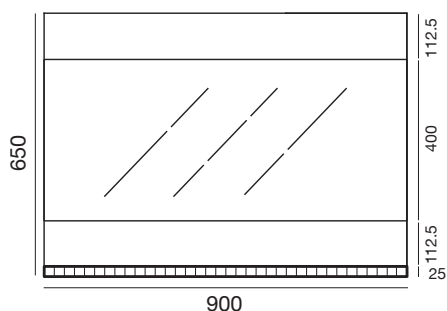


Eco 1200 Full Height Vanity with matching Eco Mirrored Shelf.

1200mm

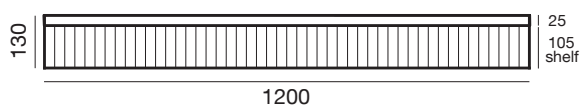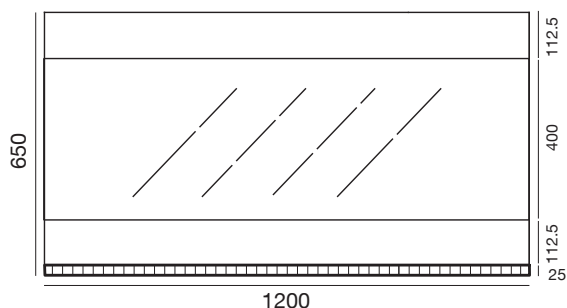

1500mm

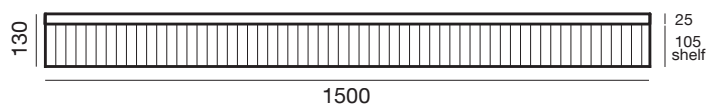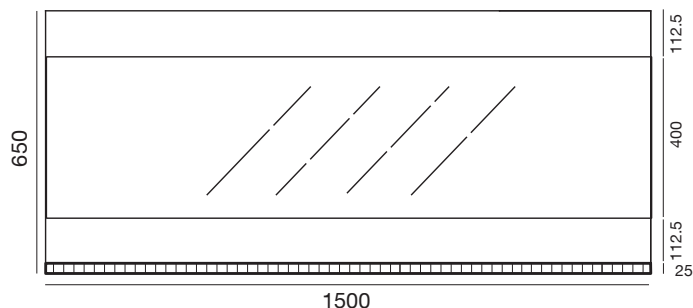

To see the complete CIBO range go to www.reece.com.au/bathrooms

Disclaimer: Products in this specification manual must by regulation be installed by licensed and registered trade people. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors.

Tech Page Version 6

CIBO

ECO MIRRORED SHELF

SPECIFICATIONS

Recommended use	Domestic
Colour Availability	Matte 25mm bamboo and 4mm mirror
Fixing requirement:	Wall hung – split batten section fixed to rear of mirror; matching section provided, to be screwed into wall. Can be fixed to stud or masonry walls.
Dimensions:	750 x 130 x 650mm 900 x 130 x 650mm 1200 x 130 x 650mm 1500 x 130 x 650mm (split batten fixing is approx. 20mm deep)

All dimensions are provided in millimetres and are subject to accepted manufacturing variations.


PLEASE INSPECT YOUR CIBO PRODUCT ON DELIVERY (or PICK UP), PRIOR TO INSTALLATION.

A visual inspection must be made of the product on delivery (or pick up), by the person receiving it, prior to installation. Please pay careful attention when removing the wrapping materials. If the product has marks, chips or imperfections deemed unacceptable and/or has been damaged in transit, the product should not be installed.

Please contact place of purchase immediately, to advise of your concerns (prior to installation).

INSTALLATION INSTRUCTIONS

1. Fix mirror to timber stud or masonry wall via use of split batten provided.
2. No set fixing points.
3. Separate loose split batten section from rear of mirror and screw into stud or brick/masonry wall – ensure accuracy by using a spirit level.
4. Hang mirror by setting batten sections together.
5. Mirror can be adjusted slightly from left to right along battens

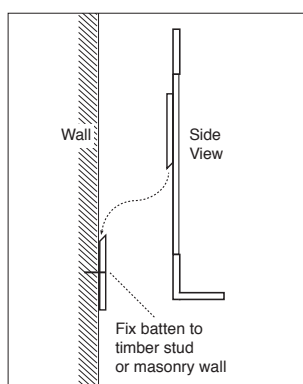

MIRRORED SHELF PRODUCT CARE & MAINTENANCE

It is the responsibility of the purchaser to ensure the product is installed and maintained appropriately.

Care must be taken when cleaning glass and mirror, we recommend clean, warm water used with a 'Micro' (soft, lint-free) cloth. Wring out all water before wiping glass and mirror. Dry immediately with a dry 'Micro' (soft, lint-free) cloth.

Do not use acid, alkali or abrasive cleaners (including commercial mirror cleaners that contain ammonia or vinegar) on the mirror surface. Care should be taken to avoid contacting mirror edges with any liquid.

CLEANING RECOMMENDATIONS

We recommend the use of soapy water or approved cleaners. This product should not be cleaned with abrasive materials. Damage caused by any improper treatment is not covered by the product warranty - refer to Warranty Conditions on the last page.

ENVIRONMENTAL CREDENTIALS

- The bamboo used in the Eco Vanity carries the International Environmental Management Standard ISO 141001:2004
- There are no toxic emissions from bamboo. The adhesive used to laminate the bamboo strips together to form the material emits 0.02mg formaldehyde per cubic metre of air (16% less than the allowable limit under the stringent European standard of 0.13mg per cubic metre of air).
- The Laminex E0 white Moisture Resistant MDF used on the front panel and internals is certified AFS/PEFC Chain of Custody timber, with a Green Tag® rating of Level A and a Formaldehyde classification of E0 (less than or equal to 0.5mg when tested to AS/NZS 4266.16).
- **Importantly**, both the bamboo surround and the Laminex drawer front panel have been sprayed and finished using water-borne two-component polyurethane top coats in a matte finish. Sourced from a specialist European supplier, the top coats are formaldehyde-free and extremely low in toxicity.

Don't risk it, use a licensed plumber.™

CIBO
BATHROOMWARE

reece