


CIBO



HABITAT FULL HEIGHT VANITY UNIT

500 / 900 / 1200 / 1500 SINGLE / 1500 DOUBLE



Side View - all Vanities

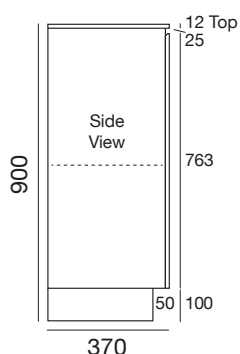



500mm

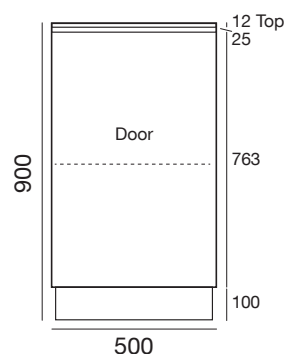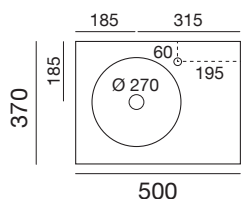

900mm

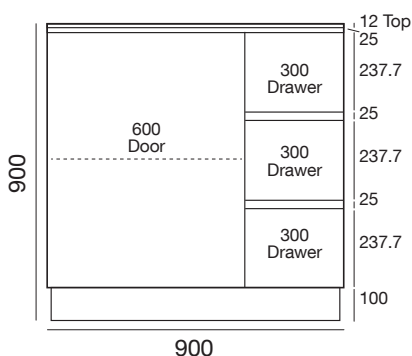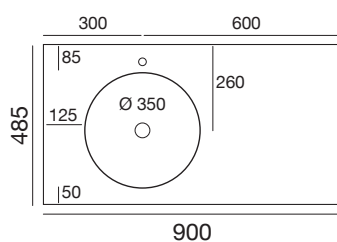

1200mm

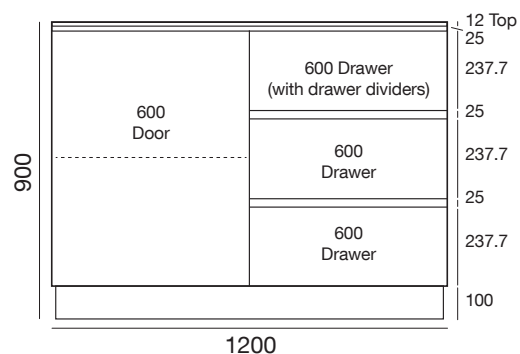
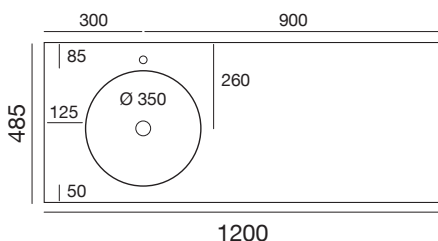


Disclaimer: Products in this specification manual must by regulation be installed by licensed and registered trade people. The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. Dimensions and set-outs listed are correct at time of publication however the manufacturer/distributor takes no responsibility for printing errors.



CIBO

HABITAT FULL HEIGHT VANITY UNIT

1500mm

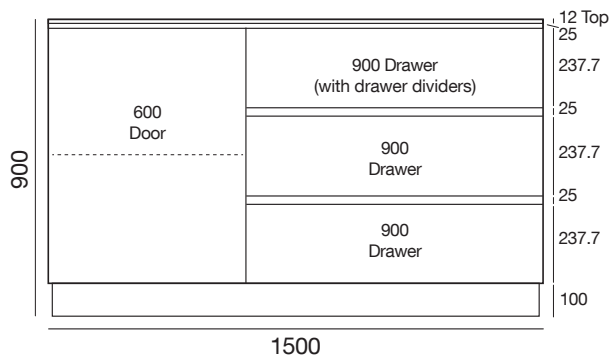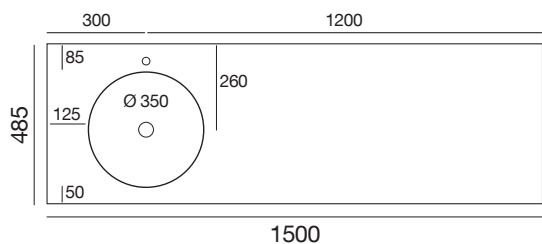

1500mm

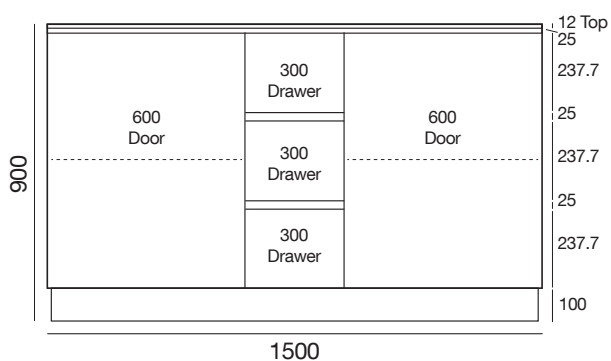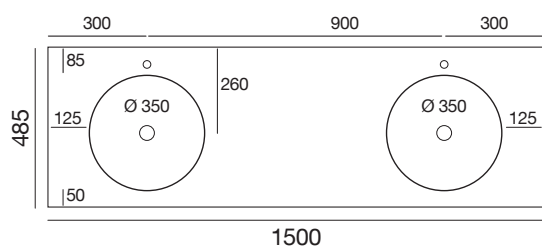

To see the complete CIBO range go to www.reece.com.au/bathrooms


Dimensions are nominal measurements only.

Don't risk it, use a licensed plumber.™

CIBO

HABITAT FULL HEIGHT VANITY UNIT

SPECIFICATIONS

Recommended use	Domestic
Size availability:	500 x 370 x 900mm 900 x 485 x 900mm 1200 x 485 x 900mm 1500 x 485 x 900mm
Material:	<p>Top: White Solid Surface Cabinet: All white matte/satin polyurethane OR White matte polyurethane + choice of five NAVurban veneers:</p>  <p>White matte/satin polyurethane NAVurban 'Fremantle' NAVurban 'Blackheath' NAVurban 'Fitzroy' NAVurban 'The Oaks' NAVurban 'Yarra Walnut'</p>
Plug & waste:	Requires 32mm plug & waste with overflow (not supplied)
Interior:	<p>Chosen NAVurban veneer and CIBO Black moisture resistant (MR) MDF Top drawer in 1200 and 1500 single vanities: Drawer dividers in chosen NAVurban veneer Note: If alternative finish option of 'All matte/satin white polyurethane' has been selected, interior detail is in White moisture resistant (MR) MDF and CIBO Black moisture resistant (MR) MDF</p>
Fixing requirement:	Full height vanity
Mechanisms:	<p>Fingerpull handle(s) Soft closing drawer(s) and door(s) One adjustable shelf inside cupboard door(s)</p>

DETAILED CLEANING GUIDE - TOP/BASIN

Corian® & Solid Surface material

CIBO recommends wiping with a soapy sponge, followed by rinsing to care for Corian® and Solid Surface material.

Deep clean – Stubborn stains

For more stubborn stains you will need to occasionally give your Solid Surface material a more thorough clean and refresh using a mild abrasive cleanser like Gumption® paste cleanser, Jif® cream cleanser or Ajax® cream or cleanser. Firmly wipe the surface with a damp sponge or cloth and the mild abrasive cleanser using a wide circular motion. Always finish by rinsing and wiping your surface with a damp cloth or sponge. The Vileda® range of cloths and non-scratch scourers are recommended.

Light marks and scuffs

Most light marks and scuffs may be removed by wiping your surface firmly with a damp sponge or cloth and a mild abrasive cleanser. Please be aware, using abrasive cleansers on your Solid Surface material may change your sheen level. By routinely cleaning the entire surface consistency in sheen should return over time.

CIBO

HABITAT FULL HEIGHT VANITY UNIT

INSTALLATION INSTRUCTIONS

PLEASE INSPECT YOUR CIBO PRODUCT ON DELIVERY (OR PICKUP), PRIOR TO INSTALLATION

A visual inspection must be made of the product on delivery (or pick up) by the person receiving it, prior to installation.

Please pay careful attention when removing the wrapping materials. If the product has marks, chips or imperfections deemed unacceptable and/or has been damaged in transit, the product should not be installed.

Please contact place of purchase immediately to advise of your concerns (prior to installation).

For detailed Installation Instructions visit www.cibodesign.com.au

1. Remove cabinet drawer(s) before installing to avoid damage. Ensure that drawer runners are covered, i.e., with bubble wrap/plastic (to prevent debris from getting into the mechanism). If the top has not been fixed to the vanity, then please remove from vanity.
2. Using a hole saw, drill necessary holes in back of the vanity for the water supply pipes and wastes etc.
3. Carefully move the cabinet into place. Pack the vanity to the required height ensuring the vanity top is level from side to side and front to back. Packers may be required behind the unit to ensure the top is level and also to prevent the unit from twisting.
4. Once the vanity is level, fasten it to the wall using washers around the appropriate fixings i.e., screws, bolts (not supplied by CIBO). It is the installer's responsibility to determine what fixing materials are needed. Fixings should be made as high as possible on unit, with more emphasis placed on the top fixings.
5. Sweep debris from the interior of the unit and remove bubble wrap/plastic from drawer runners. Replace drawer(s).
6. If the top was removed in step 1, place the top upon the unit ensuring that the front and ends of the top line up with the front and ends of the unit. This may leave gaps behind the top and the wall. This needs to be filled with silicone. Also fix the top to the vanity with silicone.
7. The unit must be sealed along the back edge of the top and down the sides against the wall with bathroom quality silicone. The best method of applying silicone is to cut the appropriate sized tip at a 65° angle and to evenly run a bead around the unit ensuring all gaps are filled. Seal around the cabinet with silicone.
8. Spray soapy water on the silicone joint (on the wall and top) to stop silicone sticking to the wall, and wipe off the excess.
9. The pipes can now be connected, and where necessary the basin siliconed to the vanity. Basins need to be sealed completely around the join.

PLEASE NOTE:

Accurate sealing of cabinet is vital for ensuring longevity of the vanity unit. It is the responsibility of the installer to adjust the drawer(s) after installation.

UNDER NO CIRCUMSTANCES SHOULD VANITIES AND/OR TOPS BE TILED INTO THE WALL.

CIBO vanities and basin/tops must be fitted to finished/completed wall coverings e.g., tile, masonry or other cladding method deemed acceptable, as per the building code (of Australia) 2013.

The CIBO Warranty does not cover any vanity and/or top and/or basin that has been tiled 'into' a wall i.e., fitting or fixing a vanity to a wall and tiling around it, and/or tiling down and/or around the vanity and top/basin.

Plumbers, please ensure a copy of the installation instructions is left with the end user for future reference